




INSTALL GUIDE FOR METAL DOOR

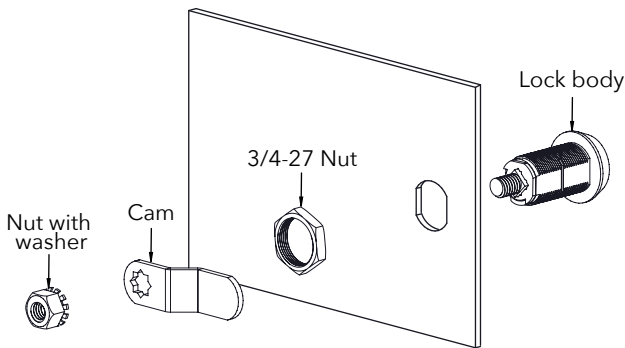



Through hole dimension

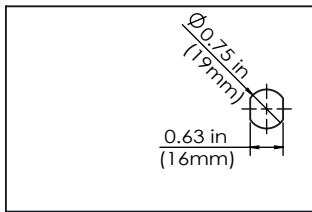

INSTALL GUIDE FOR WOODEN DOOR

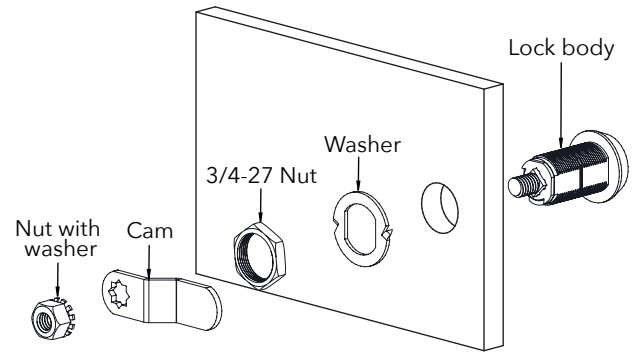

Through hole dimension

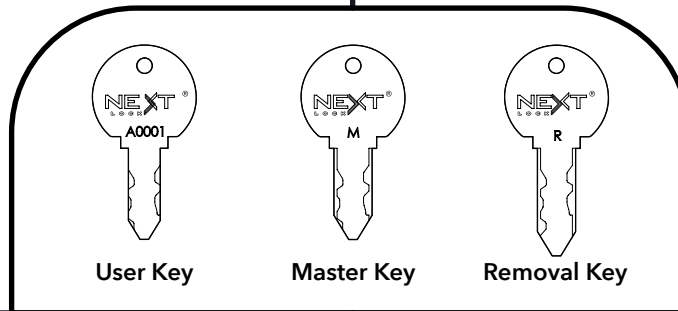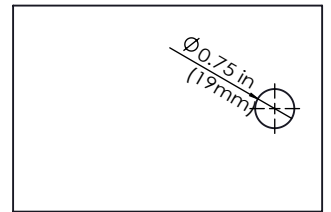

OPERATING GUIDE:

To Unlock:

1. Insert the user key.
2. Turn clockwise to unlock.
3. Open the door.

To Lock:

1. Close the door.
2. Turn the key counterclockwise to lock.
3. Remove the key.

OPERATING WITH THE MANAGER KEY:


To Unlock:

1. Insert the user key.
2. Turn clockwise to unlock.
3. Open the door.


To Lock:

1. Close the door.
2. Turn the key counterclockwise to lock.
3. Remove the key.


CORE CHANGE INSTRUCTIONS:

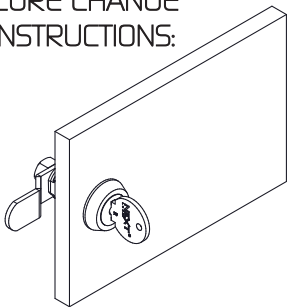


1. Insert the removal key

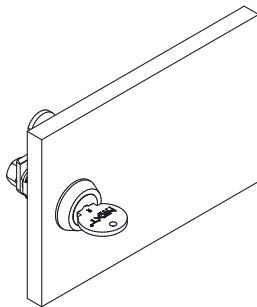


2. Turn the removal key clockwise

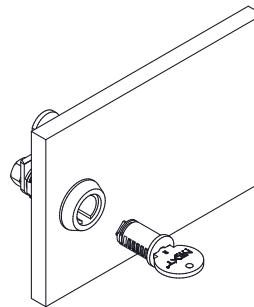


3. Pull the key to remove the core

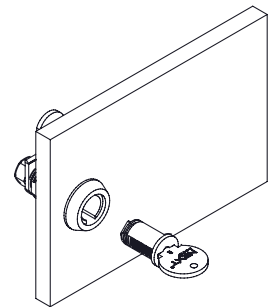


4. Insert the removal key for the new core into the replacement core

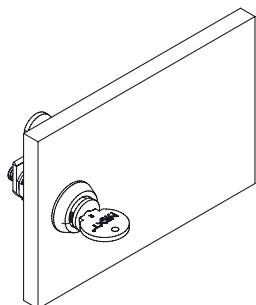

5. Insert the replacement core with key into the lock

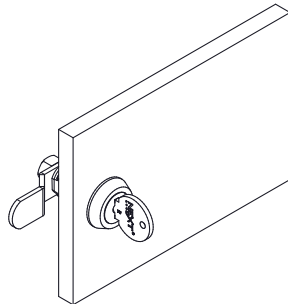

6. Push and turn the key counterclockwise until it stops

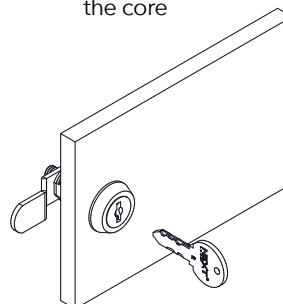

7. Remove the key

NOTE:

If the door thickness is between 0.35 in (8.5mm) to 0.59 in (15mm) you may need to unscrew the 3/4-27 nut by around 0.39 in (10mm) before changing the core